

GORENJE WA50080 PS03/080 GORENJE WA50100 PS03/100 GORENJE WA50140 PS03/140 GORENJE WA50050 PS03/050 GORENJE WA61061 PS13/06B GORENJE WA63080 PS33/080 GORENJE WS41081 PS15/08B GORENJE WA73141 PS33/140 GORENJE WA63140 PS33/140 GORENJE WA73080 PS33/080 GORENJE WS43080 PS35/080 GORENJE WA62115 PS23/110 GORENJE WA62135 PS23/130 GORENJE WA62085 PS23/080 GORENJE WA72085 PS23/080 GORENJE WA72125 PS23/120 GORENJE WS53120 PS35/120 GORENJE WS52105 PS25/100 GORENJE W7423 PS10/23120 GORENJE W8424 PS10/25120