

GORENJE WA50080 PS03/080 GORENJE WA50100 PS03/100 GORENJE WA50140 PS03/140 GORENJE WA50050 PS03/050 GORENJE WA61061 PS13/06B GORENJE WA63080 PS33/080 GORENJE WS41081 PS15/08B GORENJE WA73141 PS33/140 GORENJE WA63140 PS33/140 GORENJE WA73080 PS33/080 GORENJE WS43080 PS35/080 GORENJE WA62115 PS23/110 GORENJE WA62135 PS23/120 GORENJE WA62085 PS23/080 GORENJE WA72085 PS23/080 GORENJE WA72125 PS23/120 GORENJE WA50065 PS0A3/060 GORENJE WA50085 PS0A3/080 GORENJE WA50089 PS0A3/080 GORENJE WA50109 PS0A3/100 GORENJE WA50149 PS0A3/140 GORENJE WS53120 PS35/120 GORENJE WS52105 PS25/100 GORENJE WS40089 PS0A5/080 GORENJE WS40129 PS0A5/120 GORENJE WS40085 PS0A5/080 GORENJE W7423 PS10/23120 GORENJE W8424 PS10/25120 GORENJE W6402/SRI PS10/21104 GORENJE W7203 PS10/13100 GORENJE W7523 PS10/23120 GORENJE W9825I PS10/45125 GORENJE W6843T/S PS10/41141 GORENJE W6423/S PS10/21120 GORENJE W6603/S PS10/31100 GORENJE W6202/S PS10/11100 GORENJE W62Y2/S PS10/11080 GORENJE W72Y2 PS10/13080 GORENJE W74Y2 PS10/23080 GORENJE WA72SY2W PS10/23120 GORENJE WS60SY2W PS10/21100 Mašine za sušenje veša GORENJE D61212 GORENJE D63122 GORENJE D63225 GORENJE D61112 GORENJE D65225AL GORENJE D65238 GORENJE D75225 GORENJE D50210 GORENJE D72325 GORENJE D622CM GORENJE D624BL GORENJE D844BH GORENJE D744BJ GORENJE D9864E GORENJE D8664N GORENJE D764BJ GORENJE D7465NA GORENJE D74SY2W