

**GORENJE WA61061 PS13/06B GORENJE WA63080 PS33/080 GORENJE WA63140 PS33/140 GORENJE  
WA62115 PS23/110 GORENJE WA62135 PS23/130 GORENJE WA62085 PS23/080 GORENJE WA72085  
PS23/080 GORENJE WA72125 PS23/120 GORENJE WA50065 PS0A3/060 GORENJE WA50085 PS0A3/080  
GORENJE WA50089 PS0A3/080 GORENJE WA50109 PS0A3/100 GORENJE WA50149 PS0A3/140 GORENJE  
W7203 PS10/13100 GORENJE W7523 PS10/23120 GORENJE W72Y2 PS10/13080**