

ASW221015. AF553T1EX 15086 46150860000, AF553T1EO 15019 46150190000,
AF553T1PT 15032 46150320000, AF553T1AG 15083 46150830000 Indesit BA400 / Indesit BA401T /
Indesit IW460D/S / Indesit L548IT / Indesit L6061EU / Indesit L6061EU (37409110000) / Indesit
L6063AEU / Indesit L6063AEU (37436900000) / Indesit L6063EU / Indesit L6063EU (37409120000) /
Indesit L6064EU / Indesit L6064EU (37409160100) / Indesit L60T3CTK / Indesit L60T3CTK
(37436870000) / Indesit L648IT / Indesit L64AUS / Indesit L64AUS (37476500000) / Indesit L64XAUS /
Indesit L64XAUS (37299150000) / Indesit L64XAUS (37299150100) / Indesit L64XAUS (37476510000) /
Indesit L65AIT / Indesit L65AIT (37410510000) / Indesit L65IT / Indesit L65IT (37410490000) / Indesit
L65XIT / Indesit L65XIT (37463450000) / Indesit L68AFR / Indesit L68AFR (37434140000) / Indesit
L68AIT / Indesit L68AIT (37410540000) / Indesit L68FR / Indesit L68FR (37434120000) / Indesit L68IT /
Indesit L68IT (37410530000) / Indesit L68XFR / Indesit L68XFR (37434130000) / Indesit W402WF/S /
Indesit W405PWF / Indesit W405TXU / Indesit W406PDI / Indesit W40DI / Indesit W415TPDI / Indesit
W41SP / Indesit W41TDI / Indesit W428TPZ(IT) / Indesit W42TPE / Indesit W431TXEX / Indesit W432PT
/ Indesit W432SIT / Indesit W435PT / Indesit W43AG / Indesit W43EX / Indesit W43FR / Indesit
W43IT / Indesit W43SP / Indesit W43TAG / Indesit W43TEX / Indesit W43TEX50-60HZ / Indesit W43TXE
/ Indesit W43X(IT) / Indesit W445TPI / Indesit W44IT / Indesit W44TXDI / Indesit W44XIT / Indesit
W4521E / Indesit W51SP / Indesit W524PT / Indesit W535PT / Indesit W53FR / Indesit W53IT / Indesit
W53SP / Indesit W53TEX / Indesit W543GIT / Indesit W610TPZ(IT) / Indesit W61TXDI / Indesit W62TE /
Indesit W630FR / Indesit W634PT / Indesit W63EX / Indesit W63FR / Indesit W63IT / Indesit W63SP /
Indesit W63TEX / Indesit W63TKIndesit W63X(IT) / Indesit W63Z / Indesit W642TX(EX) / Indesit
W646XSPT / Indesit W64IT / Indesit W6521E / Indesit W65TE / Indesit W665TPI / Indesit W666TXIT /
Indesit WE462WE/S / Indesit WG420E / Indesit WG420P / Indesit WG420POM / Indesit WG420PRA /
Indesit WG420PU / Indesit WG420S / Indesit WG420T / Indesit WG420TH / Indesit WG420TI / Indesit
WG420U / Indesit WG421TI / Indesit WG421TPEX / Indesit WG421TPOM / Indesit WG421TPR / Indesit
WG421TPRA / Indesit WG421TR / Indesit WG421TRA / Indesit WG421TS / Indesit WG421TS50-60 /
Indesit WG421TU / Indesit WG421TXI / Indesit WG421TXR / Indesit WG421TXS / Indesit
WG421TXS5060 / Indesit WG421TXU / Indesit WG422TF / Indesit WG422TPOM / Indesit WG422TT /
Indesit WG422XE / Indesit WG424TE / Indesit WG424TPT / Indesit WG425E / Indesit WG425PI / Indesit
WG425PP / Indesit WG426TE / Indesit WG426TPF / Indesit WG426TPIT / Indesit WG426TPP / Indesit
WG426TXE / Indesit WG42I / Indesit WG42TE / Indesit WG430TXEI / Indesit WG431F / Indesit WG431TI
/ Indesit WG431TXOM / Indesit WG432TXI / Indesit WG432TXP / Indesit WG433TXI / Indesit
WG434TX(R) / Indesit WG435PF / Indesit WG435TPI / Indesit WG436TPI / Indesit WG436TXP / Indesit
WG437TPEI / Indesit WG439TPS / Indesit WG43TXGI / Indesit WG49TXS / Indesit WG4PD / Indesit
WG521F / Indesit WG522TF / Indesit WG522TXU / Indesit WG525PF / Indesit WG525TXP / Indesit
WG526T/1(E) / Indesit WG526TE / Indesit WG526TPF / Indesit WG530TI / Indesit WG531F / Indesit
WG535TPI / Indesit WG620G / Indesit WG620PG / Indesit WG622TE / Indesit WG622TPR